


## Under-floor Heating Controls

Wall mounted thermostats are positioned in **all bedrooms & bathrooms** with heating timed to come on at various points during the day. The screen displays a **CLOCK** - see diagram - to show that heating is timed to come on.

For best results heating should be kept in this mode.

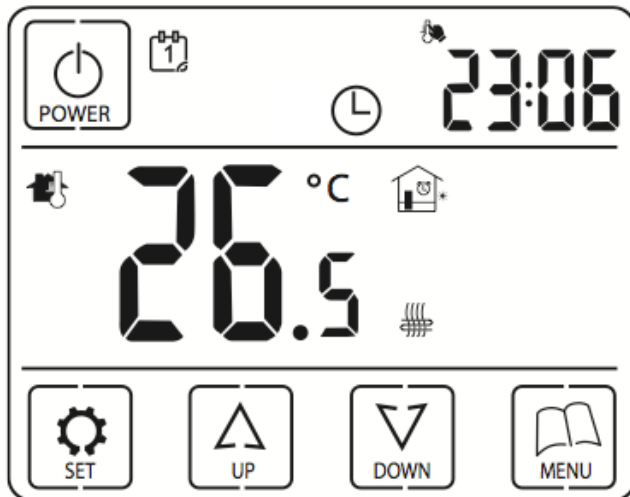

If required you can override the timed heating to either switch off, increase or decrease the temperature as follows:

- Touch the control pad and it lights up.
- **THEN** Press **MENU**. A **HAND** icon will appear - see diagram. The hand icon remains on display whilst the temperature override is operating.

- Press the **UP** or **Down** arrows to set the temperature.

### **To cancel**

- Press **MENU**. The **HAND** icon will disappear and the **CLOCK** icon will appear reverting to the auto timed setting.

### **To switch on/off**

- Press the **POWER** button
- When the thermostat is turned “off”, the control panel alternates the word ‘OFF’ with the current time. When the thermostat is turned “on”, the control panel alternates the word ‘ON’ with the current time.

